

Locking the vehicle

- The vehicle automatically locks when the key is no longer detected nearby.
- The vehicle can also be locked by pressing the  button on the key fob.

Unlocking the vehicle

- The vehicle automatically unlocks when the key is detected nearby.
- The vehicle can also be unlocked by pressing the  button on the key fob.



Opening the doors



From outside: open the door by pressing the door release button located in the body side intake.

From inside: Open the door by pressing the left or right side door button twice.



The doors can also be opened by pulling up on the door release lever located in the door pockets.



Starting

1. With the key fob in the vehicle, press the brake pedal and momentarily press the START/STOP button on the right side switch pack.
2. The driver display will change from the Czingr splash screen to the Street mode screen and **READY** will be displayed.
3. The vehicle will start up in Street mode and the powertrain will begin warming up.
4. Sport, Track, and Track+ mode can be selected once the powertrain has reached operating temperature.



Driving

D - Drive

- With the car in Ready, press the brake pedal and pull the upshift paddle to put the car in Drive.
- **D** will be shown on the driver display.

N - Neutral

- Select Neutral by pulling up on both shift paddles simultaneously.
- **N** will be shown on the driver display.


R - Reverse

- Reverse can be selected only while in neutral.
- Press the R button on the left switch pack or by pulling the downshift paddle for Reverse.
- **R** will be shown on the driver display.

P - Park

- Press the  to engage the park brake.
- **P** will be shown on the driver display.

Door Controls

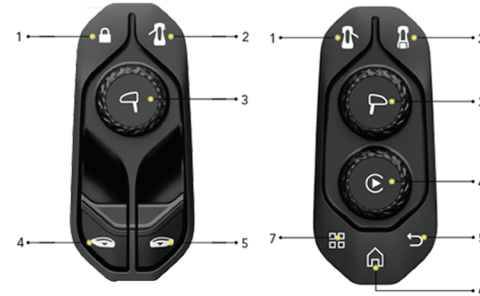

Left

1. Door Lock
2. Door Open Left
3. Mirror Left
4. Window Left
5. Window Right

Right

1. Door Open Right
2. Decklid open
3. Mirror Right
4. Play / Stop
5. Back
6. Home
7. Menu

Steering wheel controls

1. Wiper/washer


2. Voice control (Siri)

3. Left turn signal

4. Driver display scroll

5. Down-shift paddle

6. Phone

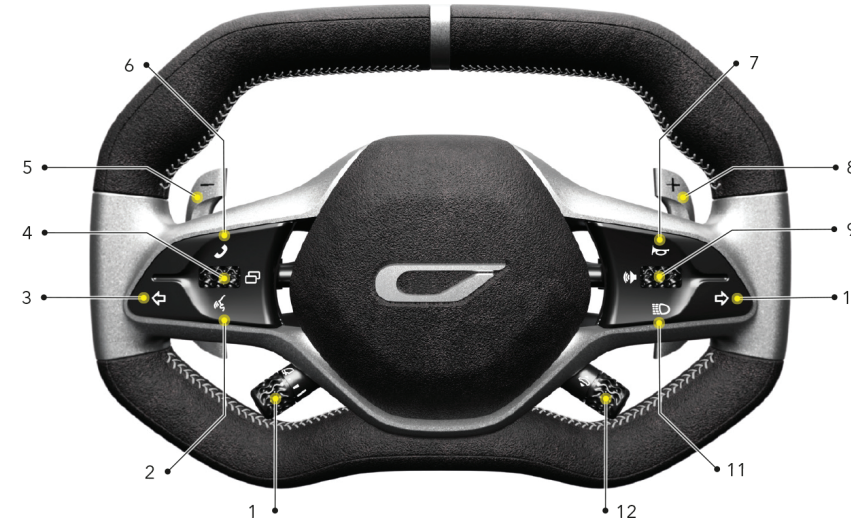

Window

- The window switches are located in the left door switch packs.
- Press down on the switch to lower the window and lift up on the switch to raise the window.

Mirror

- The mirror adjustment buttons are located in the left and right door switch packs.
- Press down on the mirror button and move the switch to adjust the mirrors.

Horn


- To sound the horn, press the  button on the right side steering wheel.

Turn signals

- Momentarily press  or  on the steering wheel.
- An arrow will illuminate on the driver display showing the active turn signal.
- The turn signal will extinguish once the steering wheel is straight.
- The turn signal can be cancelled by pressing the button again.

Nose lift

- To activate nose lift, rotate the right stalk on the steering wheel clockwise then press it in.
- The  symbol will flash on the display while the vehicle is lifting and stop flashing once it has reached raised position.
- To return the vehicle to normal ride height rotate the stalk on the steering wheel counter clockwise then press it in.
- The  symbol will flash on the display while the vehicle is lowering and turn off once it has reached normal position.

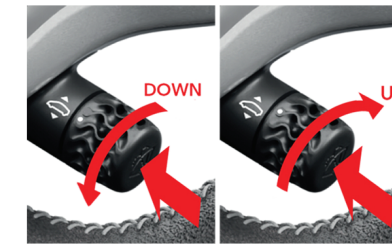

7. Horn

8. Up-shift paddle

9. Volume control

10. Right turn signal

11. High beam

12. Nose lift

Parking

1. Select Neutral by pulling up on both shift paddles simultaneously.

2. Press the Start / Stop button.



3. The parking brake will apply.

4. The **P** symbol will be shown on the driver display.



Shut down


- Exit the vehicle.
- Ensure the key fob is not left inside.
- Ensure that the seatbelt buckle is not latched.
- Ensure the doors and decklid are fully closed.
- The vehicle will power down once the key fob is out of range of the vehicle.
- Put the trickle charger on the car if it is going to sit for more than 3 days.

Opening the decklid



- The decklid can be unlatched from inside the vehicle by pressing the button on the ride door switch pack twice in succession.

Or

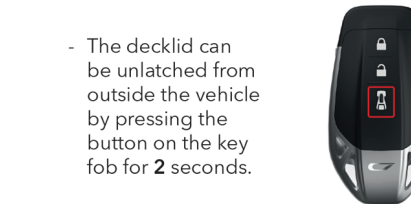

- The decklid can be unlatched from outside the vehicle by pressing the button on the key fob for **2** seconds.




- Once unlatched, lift the decklid up, do not lift from the wing.


- To close, push down until it engages the latches. Once engaged, the decklid will fully close automatically.

Fueling

- Before fueling, press the START/STOP button to power down the vehicle and close the doors.
- The fuel filler is located on the left side of the car in the engine bay.

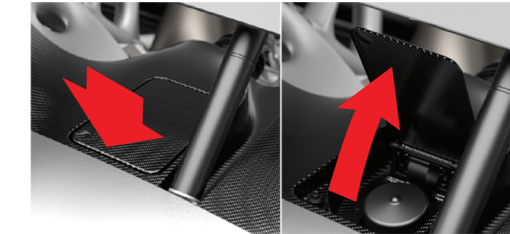

- Open the decklid to access the fuel filler door.
- Open the fuel filler door by pushing and then releasing.
- Remove the cap from the fuel filler neck.
- Route the fuel nozzle between the bodywork and the decklid rather than inside the engine bay.
- Insert the fuel nozzle in the filler tube.
- Replace the filler cap, close the filler door and decklid.

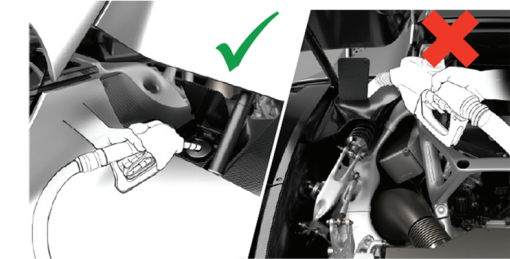


NOTE: Ensure a suitable grade of fuel is selected, (recommended 93 RON, minimum 91 RON) and fill to the desired quantity or until the auto-shut off mechanism is triggered.

Left Side

1. Rear fog light
2. High beam lights
3. ESC 'Off'
4. Reverse
5. Parking brake
6. Interior lighting
7. Master light switch
8. Street/Sport mode
9. Track mode

Dash Switch Pack Buttons

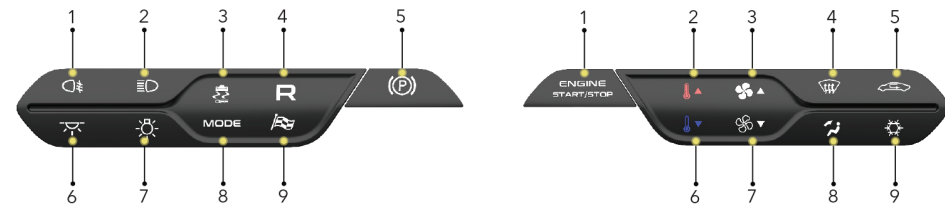

Right Side


1. Start/stop
2. Temperature increase
3. Fan speed increase
4. Defrost
5. Air recirculation
6. Temperature decrease
7. Fan speed decrease
8. Air flow distribution
9. Air conditioning

Shifting

- The vehicle defaults to auto shift mode in Street and Sport modes. A "D" will be shown on the display.



- The vehicle is in manual shift mode in Track and Track+ modes. The numerical gear will be shown on the display.

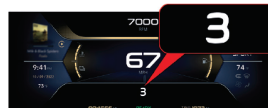

- To change from auto shift mode to manual shift mode pull the upshift or downshift paddle while the vehicle is in motion.

- To change from manual shift mode back to auto shift mode pull and hold the upshift paddle for 2 seconds or put the vehicle in neutral and then put it in Drive.

Drive Modes

- The vehicle has four different selectable drive modes, Street, Sport, Track, and Track+.
- Sport, Track and Track+ modes are available after the powertrain has reached operating temperature.

Street Mode

- The vehicle will always power up in Street mode no matter what mode the vehicle was last in.
- Street mode is displayed on the screen.

 


Sport Mode

- To enter Sport press the MODE button.
- The Sport layout is shown in the driver display.





Track Mode (Use only in suitable conditions)

- To enter Track mode momentarily press the  button.
- The vehicle must be in Sport mode to enter Track mode.



 Track+ Mode (Use only in suitable conditions)

- To enter Track+ mode, press and hold the  button for 2 seconds.
- A message notifying that Track+ has been selected is displayed.
- Press the  button to confirm Track+ mode selection.

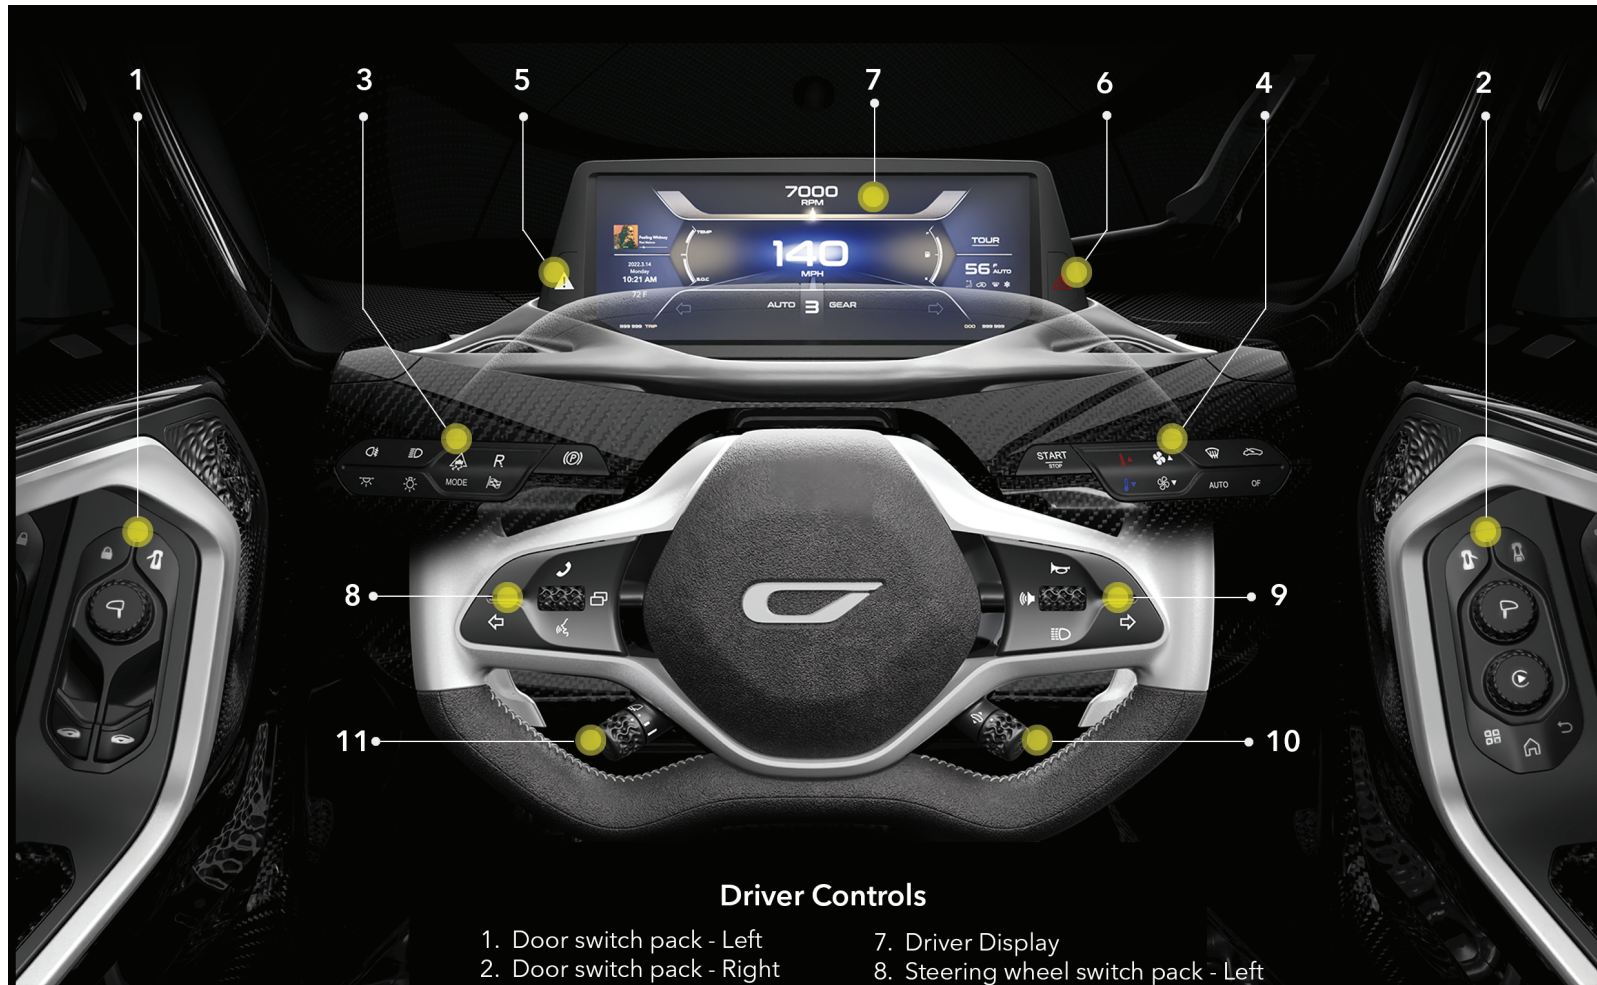


Driver Controls

1. Door switch pack - Left
2. Door switch pack - Right
3. Dash switch pack - Left
4. Dash switch pack - Right
5. Warning Indicator Light
6. Hazard Indicator Button
7. Driver Display
8. Steering wheel switch pack - Left
9. Steering wheel switch pack - Right
10. Nose Lift
11. Wiper/Washer



Please consult the owner's manual for additional information.

P0059502AV2 0425

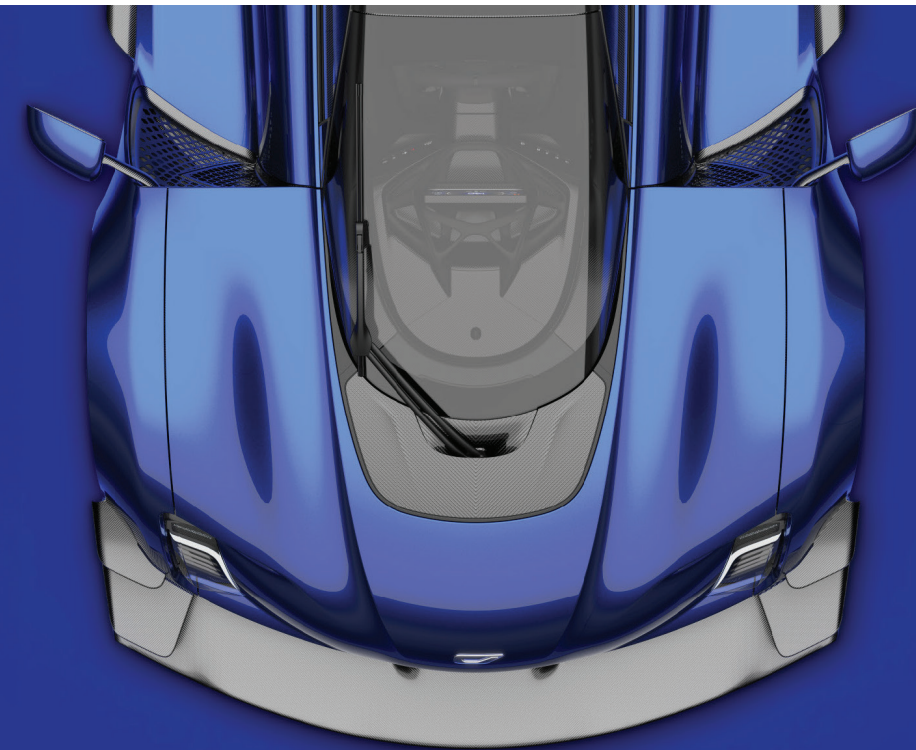

Quick Start Guide